

# SM102-2 Operating Manual

implement standard

Q/320412BXV001-2015

**Parameter setting :** ①unlock: press “select/unlock” button lasting for 5 seconds, “lock” light went out, first word on the left will turn on, the three on the right side is corresponding numerical value of this parameter ,now enter parameter setting state, press “+” and “-” adjust parameter; then press “setting /unlock” button will switch in turn among the parameters.

**Exit/save parameter setting:** after finishing setting the parameters, press “select/unlock” button return temperature display interface,now exit the parameter setting, parameters save successfully; otherwise stop in parameters setting interface for 30 seconds, system will exit it automatically, and back to temperature display interface, set parameter will be saved.

## Setting parameter comparison table:

hole size: width 113mm\*height 45mm

code	Name/code	Range	Factory setting	Note
1	Upper Temperature Limit	-50° C~49.5° C	00.0° C	When reach the setting value, the compressor shut down.
2	Lower Temperature Limit	-49.5° C~50° C	05.0° C	When reach the setting value, the compressor shut down.
3	time interval of defrosting(when setting is 0 hours, means shut down)	0~99hours	05 hours	Twice time intervals of defrosting Timing mode:cumulative working hours of compressor
4	Defrosting finish time	1~99 minutes	30 minutes	Defrosting last time
5	Temperature for stopping defrosting	1° C~35° C	15° C	When reach the setting value, stop defrosting
6	Power on delay	1~360 seconds	120 seconds	Prevent compressor starting frequently
7	Delay on drip after defrosting	0~99 minutes	5 minutes	Prevent freezing
8	Refrigeration temperature correction	-5° C~5° C	0.0° C	Correct refrigeration sensor errors
P	After sensor is fault, compressor working lasting	10~120 minutes	15 minutes	Can reach product temperature requirement
L	After sensor is fault, compressor stop intervals	20~300 minutes	30 minutes	Can reach product temperature requirement

**Stop delay:** after temperature controller power is cut off,then turn on, press “+” for 4 seconds, enter refrigeration state, when temperature reach the setting lower limit , it will exit this state automatically.

**Manual defrosting:** press“manual/stop”button for 4 seconds, now enter compulsive defrosting,Reference to setting parameter comparison table“4” time to finish defrosting, when defrosting, press “manual/stop” button for 4 seconds, it will lift the state.

**Code explain:** (1)C is refrigeration temperature (2)H is defrosting temperature (3)E is defrosting time.

**View defrosting temperature:** when refrigeration, shortly press “manual/stop” button, the screen showed H means defrosting sensor temperature.

**View defrosting time remains:** when defrosting,shortly press “manual/stop” button,the screen will shows time remaining for defrosting is E minutes.

**Fault code:** (1)interface shows “ C CCC “ , is the damage of refrigeration temperature sensor, remind the users to change the sensor, and also transfer and borrow the defrosting sensor, making system in normal work. (2)interface shows “ H HHH “,is the damage of defrosting temperature sensor, remind the users to change the sensor, and also transfer and borrow the refrigeration sensor, making system in normal work.

**Note:** when these two sensors are all damage at the same time, the system will enter the first set P/L state.

**Advice:** place a temperature meter inside the room for comparing and adjust the temperatures conveniently.